



Setup Guide

Getting your frame online takes about five minutes.

1 Plug it in

Connect the frame to power with the included cable. The screen lights up on its own within a few seconds.

2 Join “Pict-O-Vision Setup”

On your phone or computer, open Wi-Fi settings and join the network called **Pict-O-Vision Setup** — it’s coming from the frame itself and needs no password.

Why am I doing this?

The frame has no keyboard of its own, so this is how it borrows yours for a moment — just long enough to save your Wi-Fi info for auto-connection. The instant it’s connected to your network, it drops this temporary one.

3 Pick your Wi-Fi

A setup page should open by itself. If it doesn’t, open a browser and go to **pictovision.local**. Choose your home network from the list, enter its password, and tap **Save**.

4 Wait for “Upload Photos”

The frame restarts and joins your network — about 15–20 seconds. Once the screen says **Upload Photos!**, it’s online and waiting for photos.


5 Add your photos

From any phone or computer on the same Wi-Fi, visit **pictovision.local** or the IP address shown on the frame’s screen and tap **+ Upload**. That’s it — it’s yours now.

Good to know

Moving the frame to a new network? Hold **Screen** (button 4, far right) for 5 seconds to forget the old Wi-Fi, then start again from Step 2.

*Setup page won’t open, or **pictovision.local** won’t load?* Hold **Backlight** (button 1, far left) to show the frame’s numeric address, then type that into your browser instead.

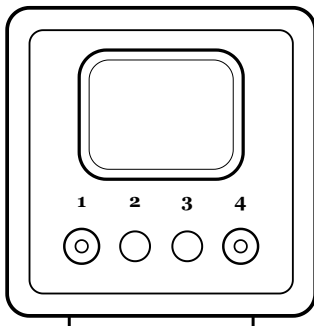

Front of the frame · buttons left to right

The four buttons

- ① **Backlight**. Tap to cycle screen brightness. Hold to show the frame’s IP address.
- ② **Decorative**. No function.
- ③ **Decorative**. No function.
- ④ **Screen**. Tap to turn the display off and on. Hold 5 seconds to reset Wi-Fi.

Manage your Photos

Thumbnails. Everything you upload appears as a thumbnail, and the frame plays through them as a slideshow.

Show just one. Click a thumbnail to pin it — it gets a red frame and holds on screen. Click it again to return to the slideshow.

Settings tab. Delete photos, set how long each photo stays on screen, and choose how photos are framed:

Fit keeps the whole photo visible. **Fill** fills the screen and centers the photo, so the edges may be cropped.
